

# CNG NOZZLE OPERATING INSTRUCTIONS



- 1** Place the fueling nozzle onto the receptacle until it stops.



- 2** Hold the fueling nozzle steady and retract the trigger slightly until it snaps in. Begin refueling.



- 3** After refueling, release the latch in direction of the arrow.



- 4** Wait for pressure release and remove the fueling nozzle.